


250 FILM LOADER

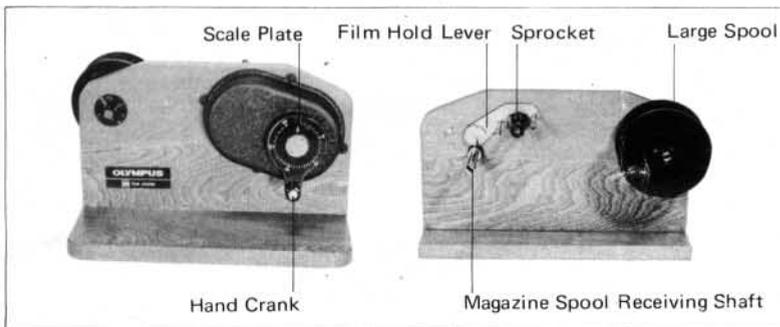


SPECIFICATIONS

● **Film:** 24 x 36mm format, standard 35mm 100-foot bulk film rolls ● **Film winding:** Rotating hand crank with automatic stop at preset film lengths ● **Frame counter:** Subtractive, manual setting type with automatic stop at "0" ● **Maximum spooling length:** 10m (33 ft.) for 250 frames ● **Dimensions:** 142mm x 250mm x 153mm (5-5/8" x 9-7/8" x 6") ● **Weight:** 940 gr. (33.2 oz.)

The 250 Film Loader provides fast and easy spooling of bulk film onto the 250 Film Magazine Spool for use with the 250 Film Back 1.

IMPORTANT: The following steps must be done in the darkroom.

- 1) Dismantle the 250 Film Magazine into the Inner Shield, Outer Shield and Spool.
- 2) Remove the rim from the Large Spool by turning it counter-clockwise.

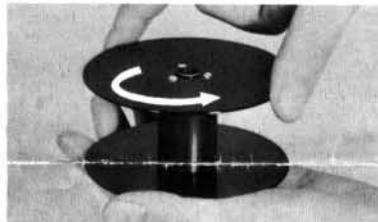

- 3) If the 100-foot roll of bulk film comes rolled on a spool, remove the axle.

- 4) Place the 100-foot bulk film roll on the Large Spool and replace the rim.


- 5) Place the Large Spool on the Loader's Magazine Spool Receiving Shaft as shown making sure the spool fork aligns with the groove.




- 6) Place the empty spool from the Magazine onto the Loader's Magazine Spool Receiving Shaft.




- 7) Place the Film Hold Lever on the stopper above the Magazine Spool Receiving Shaft.

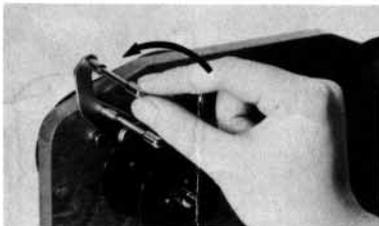

- 8) Cut the film leader so that it can be easily inserted into the slot on the Magazine Spool. Make sure the film perforations engage with the sprocket on both sides.

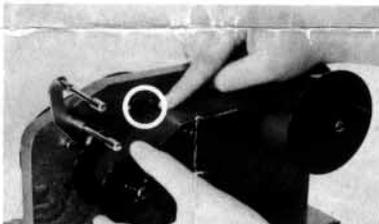

- 9) Push the Film Hold Lever onto the sprocket until it clicks into position. The film will be held between the bars on the Film Hold Lever and the sprocket.

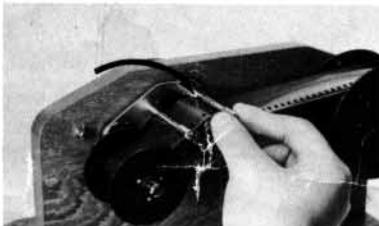


- 10) Take up any slack in the film by turning the Magazine Spool counter-clockwise.

- 11) Set the Film Scale on the Loader by pulling out the Scale Plate and turning it counter-clockwise until the arrow is opposite the number of frames desired.



- 12) Wind the film onto the Magazine Spool by slowly rotating the hand crank clockwise. The crank will automatically stop at the preset film length.

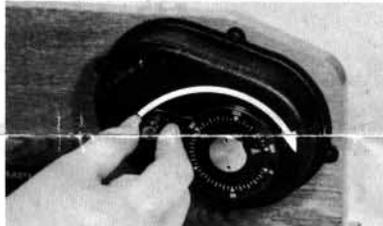

- 13) Cut the film between the two spools.



- 14) Remove the Magazine Spool and place it in the 250 Film Magazine according to the instructions provided with the 250 Film Back 1.